


Battery Replacement Instructions for IQ4 Panel

1. **Power down panel:** Go to Settings/Advanced Settings and enter the Installer/ Dealer/Master code, then select “**Power Down**”.
2. **Unplug Battery Connector:** Once the panel is powered down, unplug 4 pin battery connector from the board.

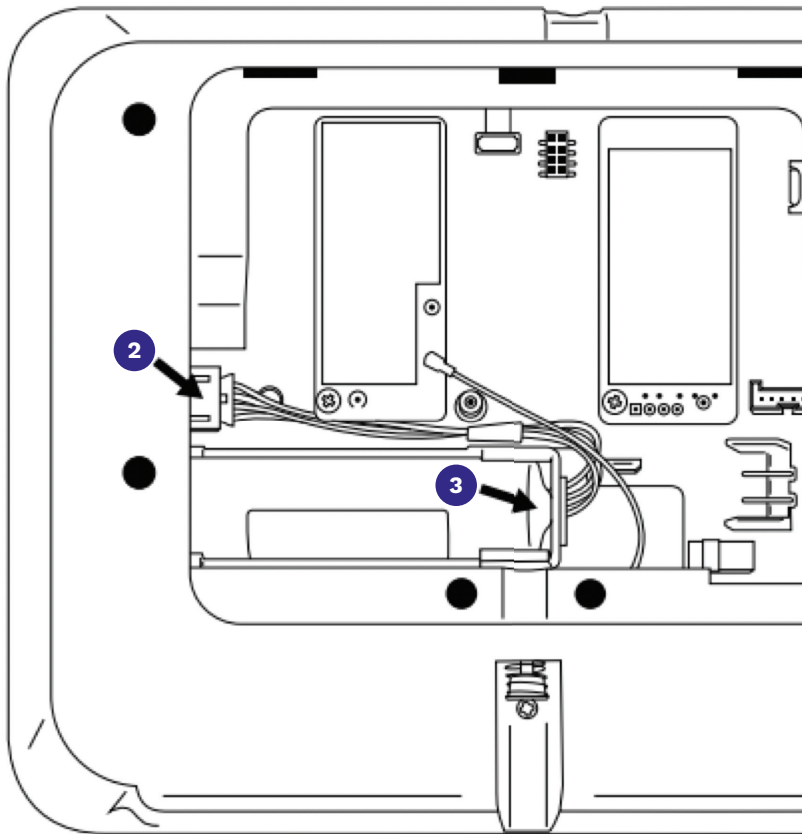

3. **Remove Battery:** Pull up on the edge of the battery with your finger to release it from the plastic hold down.
4. **Install New Battery:** Press the battery into place. Route the cable between the battery and the daughter cards.
5. Plug the 4 pin connector back in and power the panel back up.

CAUTION :

Do **NOT** use a screwdriver or anything sharp that could puncture the battery.

Do **NOT** pull on the battery cable to try and remove battery.