


## Battery Change Guide - Smoke Alarm Sensor

To change the batteries on the Smoke Alarm Sensor:

1. Slide Sensor in direction of arrow to remove from mounting plate (see image below).
2. Remove 2 screws from sensor base. Remove the top cover to reveal the battery. This will send a tamper signal to the control panel.
3. Replace with a CR123A battery ensuring the + side of the battery faces as indicated on the device.
4. Re-attach the cover. You should hear a click when the cover engages properly.
5. Re-install the two screws holding the sensor together.

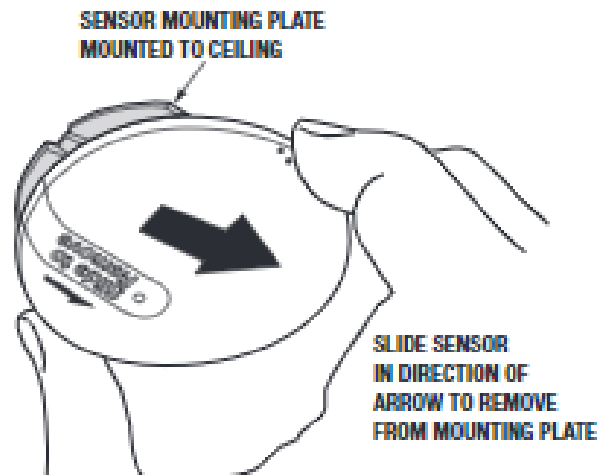

If you require assistance with any step of your battery installation, please contact us at **1-866-476-0420**.