 


### To change the batteries on the Alarm.com Image Sensor:

1. Carefully slide the front of the sensor up off the sensor back. (You do not need to remove or dismount entire sensor back and mounting arm.)
2. Replace the sensor batteries with AA 1.5v Lithium or Alkaline batteries (x2).
3. Slide the Image Sensor back onto the mount.



**Note:**

The Image Sensor will enter “Tamper” mode when it is moved for battery replacement. This is normal. The Image Sensor will return to normal operation mode after approximately 5 minutes.

If you require assistance with any step of your battery installation please contact us at **1-866-476-0420**.