


To change the batteries on the Door/Window Contact:

- At the top of the sensor, push down the clip to unlock the sensor's backplate. Then, gently pull down on the backplate to remove it.
- Place a small flathead screwdriver in the slot between the metal clip and battery. (See Part F in Figure Below)
- Holding down the raised plastic edge in the battery compartment, gently twist the screwdriver to pop out each battery.
- Insert the replacement CR2032 3V batteries (x2) in the compartment. The plus (+) sign of both batteries should be facing up and the minus (-) side facing down.

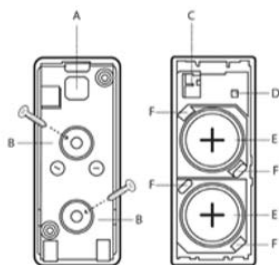

A Access hole for external input wire (on backplate)
 B Top and bottom mounting holes (on backplate)
 C External input wire jack (on sensor)
 D Tamper switch (on sensor)
 E 3-Volt (3V) lithium coin battery compartments (on sensor)
 F Metal clips for removing batteries (on sensor)

If you require assistance with any step of your battery installation please contact us at **1-866-476-0420**.