


To change the batteries on the Smoke/Heat/Freeze Alarm:

- Remove the alarm from its base by twisting it counter-clockwise. Remove and dispose of the batteries according to your local regulations.
- To ensure proper power-down sequence, wait a minimum of 20 seconds before inserting new batteries.
- Insert AAA batteries (x3) in the battery compartment. Follow the polarity diagram inside the compartment. If the batteries are inserted incorrectly, remove gently with a non-conductive tool and correctly reinsert.
- Reinstall the alarm onto the mounting base by turning the alarm clockwise until the mating marks align.
- After the power-up sequence, the green LED should blink about once every 12 seconds to indicate normal operation. If the batteries are not inserted correctly, the alarm will not operate and the batteries may be damaged. If the alarm does not power-up, check for correct battery insertion and for fully charged batteries.

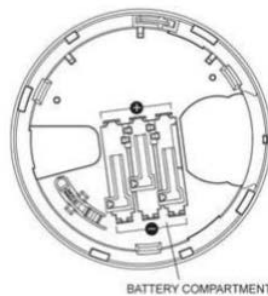

If you require assistance with any step of your battery installation please contact us at **1-866-476-0420**.